

1. Modify file /etc/asterisk/manager.conf. Make sure the enabled option value is "yes", and add the red line to file. see below

```
[root@localhost ~]# vi /etc/asterisk/manager.conf
```

```
[general]
enabled = yes
port =5038
bindaddr = 0.0.0.0

[trunk]
secret = siskytrunk
write = command
```

save this file

```
[root@localhost ~]# asterisk -r
asterisk1*CLI> reload
```

2. Download the register_sisky_trunk and install it.

```
[root@localhost ~]# cd /usr/src
[root@localhost src]# wget http://www.yeastar.com/download/register_sisky_trunk.tar.gz
[root@localhost src]# tar xzvf register_sisky_trunk.tar.gz
[root@localhost src]# chmod +x register_sisky_trunk
[root@localhost src]# ./register_sisky_trunk
```

3. Auto Start.

Modify file /etc/rc.d/rc.local. add the red line to file. See below.

```
[root@localhost src]# cp register_sisky_trunk /usr/sbin
[root@localhost src]# vi /etc/rc.d/rc.local
```

```
#!/bin/sh
#
# This script will be executed *after* all the other init scripts.
# You can put your own initialization stuff in here if you don't
# want to do the full Sys V style init stuff.

touch /var/lock/subsys/local
/usr/sbin/register_sisky_trunk
```

save this file.