

Hardware Installation

In order to successfully install the SKY800 card into your PC, please follow these directions carefully. Otherwise, your hardware maybe will not function properly and could become damaged.

Steps

1. Power down the PC
2. Unplug the PC from its main AC power supply
3. Insert the SKY800 into a 3.3- or 5-volt PCI slot (PCI 2.2 or greater required)
4. If your card have S2 (FXS) module (Green module) or SO module (Black module), plug the hard disk power supply cable to power jack.
5. Fix the SKY800 Card
6. Power on the PC

After following these steps, hardware installation is complete.

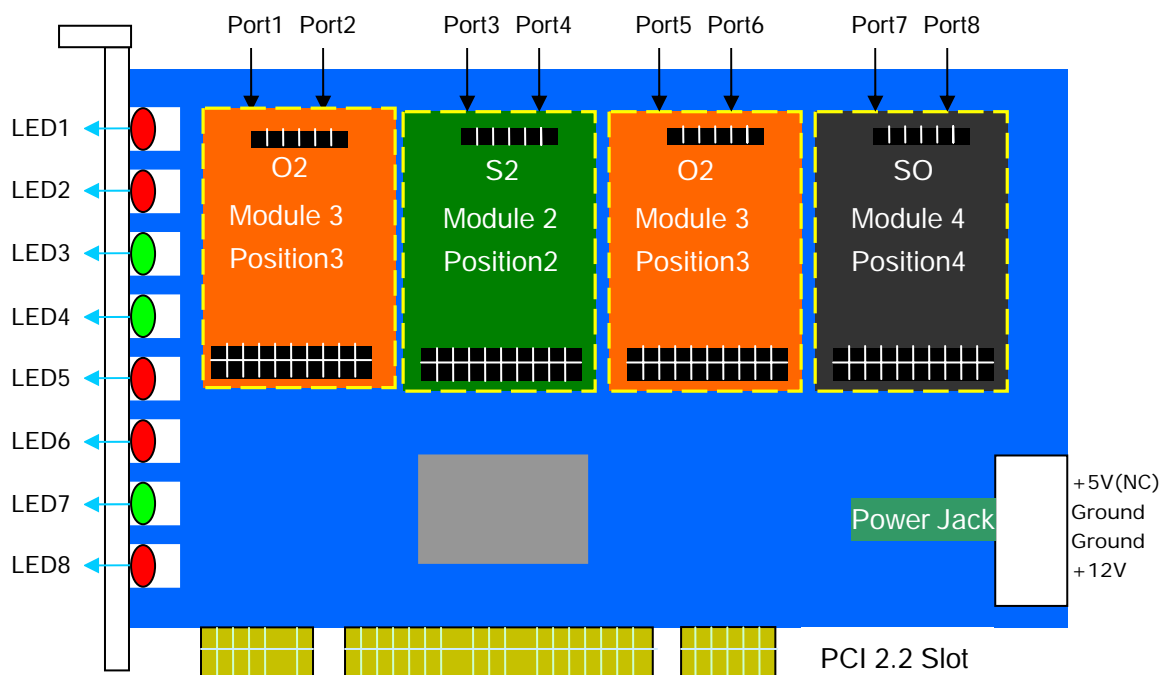


Figure 1: SKY800 Modules

SKY800 can install 4 modules S2 (FXS), O2 (FXO), or SO (FXS & FXO), each one with 2 ports for connecting more analog telephones.

 **Red light: it stands for the FXO port.**

 **Green light: it stands for the FXS port.**

Standard Package:

SKY800 mother card; Up to 4 daughter modules; 4 line cables and 1 power cable; SKY800 Instruction.

Warranty: Yeastar is responsible for the quality of all cards and modules. For the end users, included with the purchase of the SKY800 is 30 days of email technology support to get your card running, 1 year warranty of hardware performance. For the agents, Yeastar will provide real-time service and good support.

Each RJ 11 socket has 6 pins, SKY800 just use the middle 2 pin (3rd and 4th pin) to connect to you 2-wire telephone line, other pins are not used.

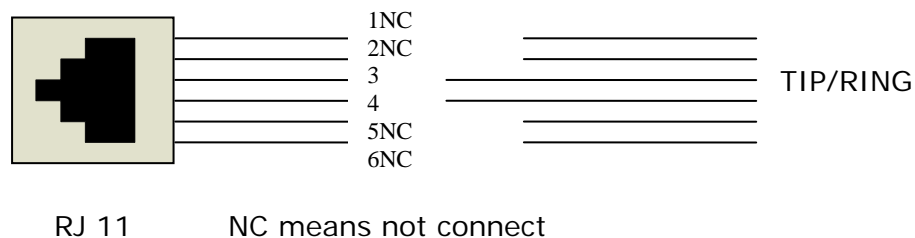


Figure 2: SKY800 Jacks

Driver Installation

Please read the guide carefully from <http://www.yeastar.com> If you have any problem about it, please contact us through support@yeastar.com

If you want to connect with PBX, SKY800 card's FXS port should connect to PBX CO port and FXO port connect to PBX extension port.